



Maintenance Procedures

1.0 Tonicity – Pre Finished Clay Tiles

All exterior surfaces require an **annual** clean.

- A thorough power wash with a combined cleaning agent designed for maintenance cleaning is recommended at maximum 900p.s.i using 30 litres per minute.
- Caustic based preparations should never be used.
- Tonicity tiles are low maintenance and are dirt repellent.
- For Graffiti removal use a solvent free graffiti remover. One such product is Delta Activator – Bio Graffiti Remover.

2.0 Tile Cladding

An annual inspection of the cladding should be undertaken at the same time as the **annual** clean.

- Check stop end flashings around decks windows and report any adhesion failures of sealants.
- Check parapet flashings and report any damage. Re-apply sealants to parapet flashings at any sign of cracking or delamination.
- Wash down horizontal and vertical aluminium profiles so as to remove all debris, grime and particles.
- Visually inspect Tonicity Tiles for damage and re-place any damaged tiles as required. Each individual tile can be exchanged by non destructive means.
- Ensure ventilation and drainage holes above windows, doors and soffit junctions are kept clear.

TE-SY-TO-Maintenance-110421